


## Instructions

### Modern Hanging Shelf

R021

# Modern Hanging Shelf

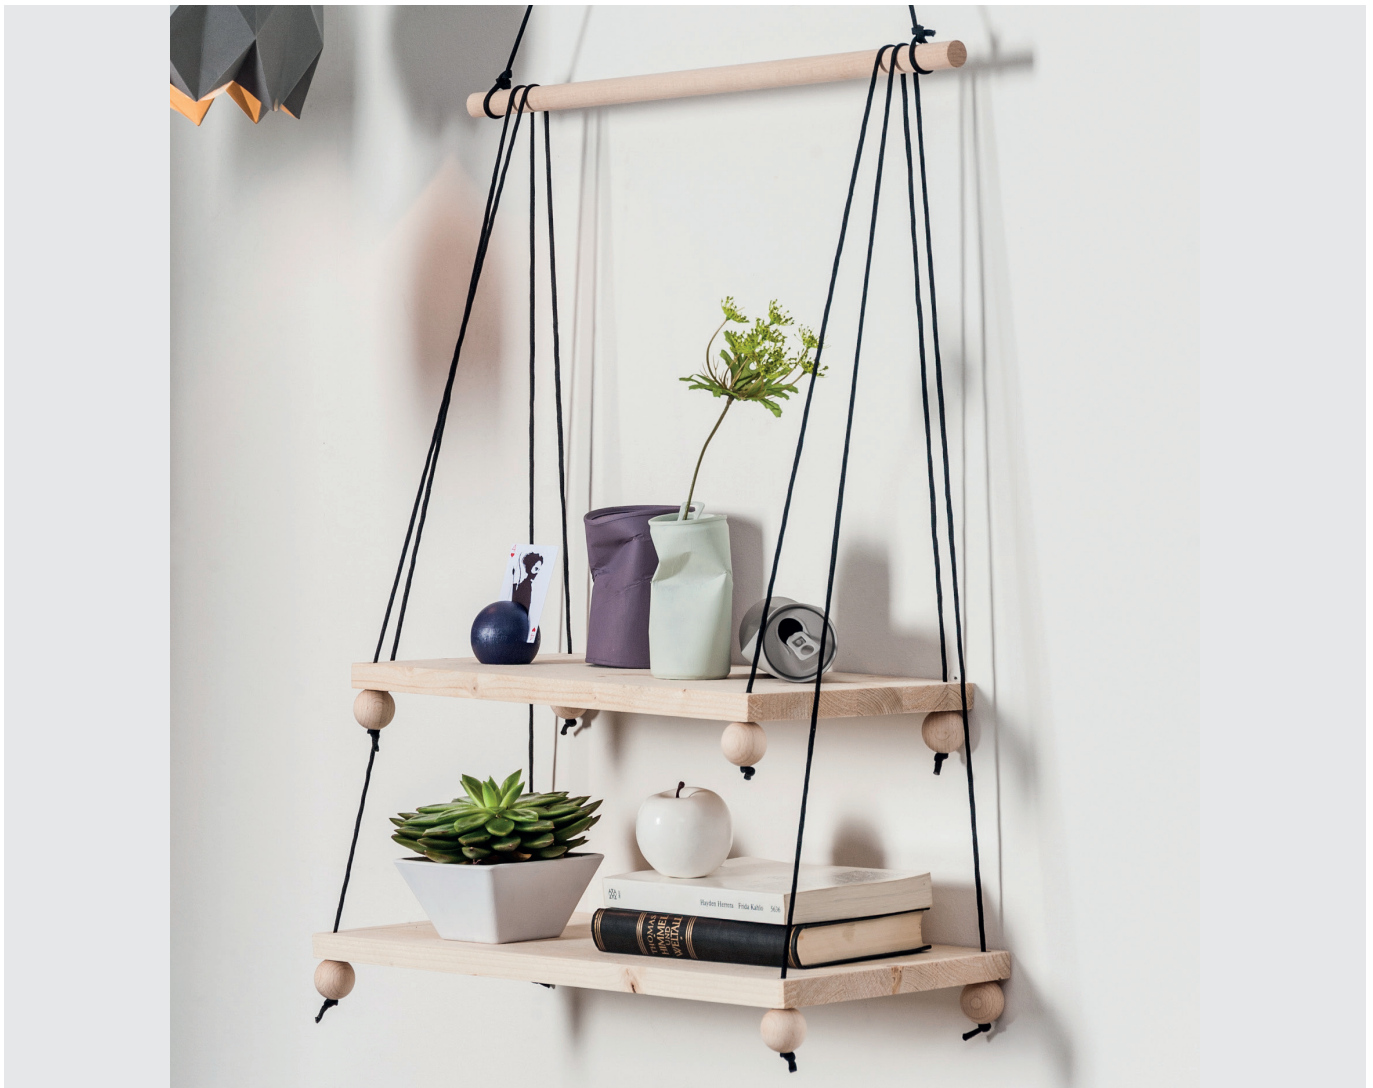

#### Material used:

Spruce wood, approx. 500 x 200 x 18 mm

Beech dowel,  $\varnothing$  18 mm x 100 cm

PARACORD – plaited cord, black, approx.  $\varnothing$  3,5 mm x 4 m

Wooden sphere, approx.  $\varnothing$  30 mm, drill hole: ca. 6 mm, set of 6

#### Article number:

728719

600567

559783

601941

#### Quantity:

2

1

3

2

#### Recommended tools/material:

Bosch electric drill

372259

Wood drill, 6 mm

331047

Puk saw

350035


Grinding timber

518767

Carpenter's folding rule (2m)

366216


Gas lighter (to seal the ends of the PARACORD threads)

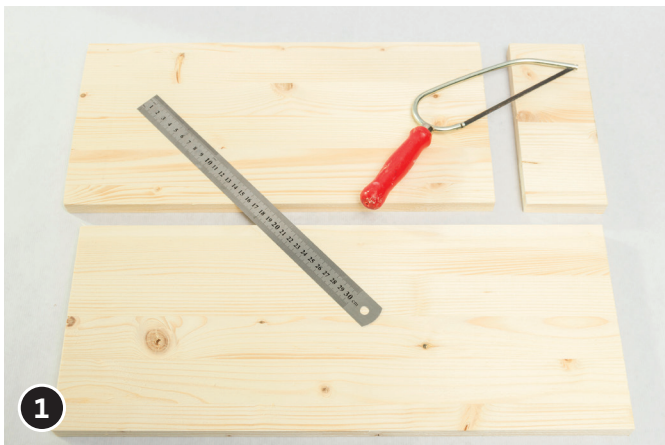

1 Cut the two boards to a length of approx. 40 and 50 cm.



2 Drill 6 mm holes approx. 2 x 2 cm away from the outside edges.

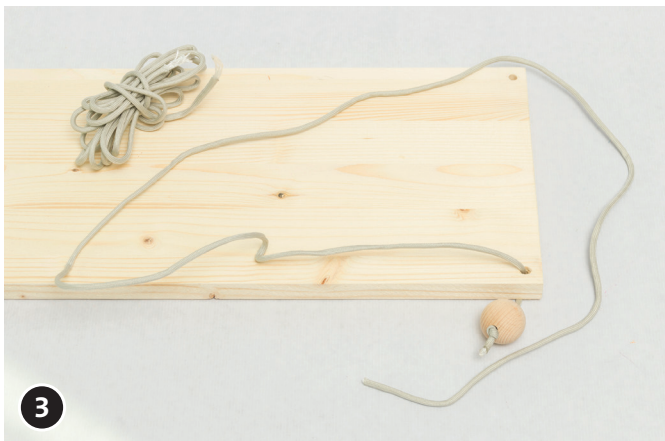

3 Shorten the PARACORD to 2 x 1,40m – 2 x 1 m. Thread the long cord through the large board and the short cord through the short board. Fix the wooden spheres with a know at the bottom and fuse the ends with the lighter.

**Hint:**  
Shorten the dowel to approx. 50 cm and a piece of PARACORD to approx. 1,50 m. Tie a loop at both ends of the cord to place the dowel inside. Add the PARACORD with the boards first.

*Have fun,  
Your OPITEC Creative Team*