

Instruction

Summer doorstop

R021

Summer doorstop



Required items

Polyfaser rope, approx. Ø14mm x 5m

Article no.

528111

Quantity

1

Creative – Casting cement, 1 kg

570130

1

Mug, transparent 75 x 93 mm

485079

1

Recommended materials/tools

Parcel tape approx. 55mmx66m

898120

1



1
Cut the Polyfaser rope with a knife to the desired length. (Note that a part of rope will be hidden in the concrete). Put the scotch tape around the ends of the rope to prevent it from fraying.



2
Wrap the rope with a tape at the required height so it does not get dirty when the rest is put into the concrete.



3
Mix the creative cement properly and proceed according to the instruction included.




4
Pour the concrete into a mold. The shape of the doorstep depends only on you.



5
Put the rope into concrete up to the scotch tape marks.



6
Make sure that the rope cannot move.

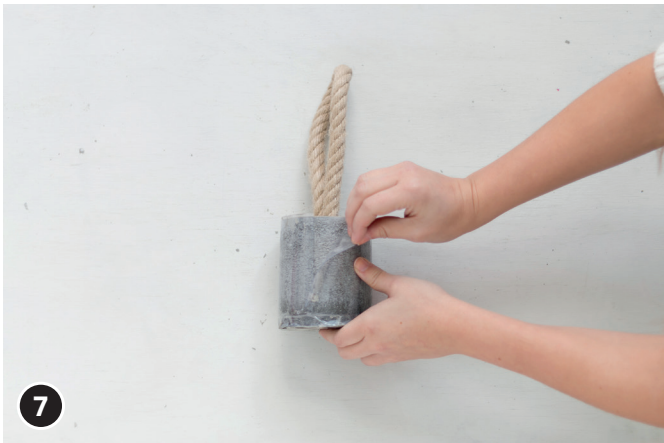

Once the concrete has dried, you can remove the mold.

Now your doorstop is finished.

OPITEC Creative team wishes you lots of fun!