


Application Pattern

WT_003_herringbone

Herringbone

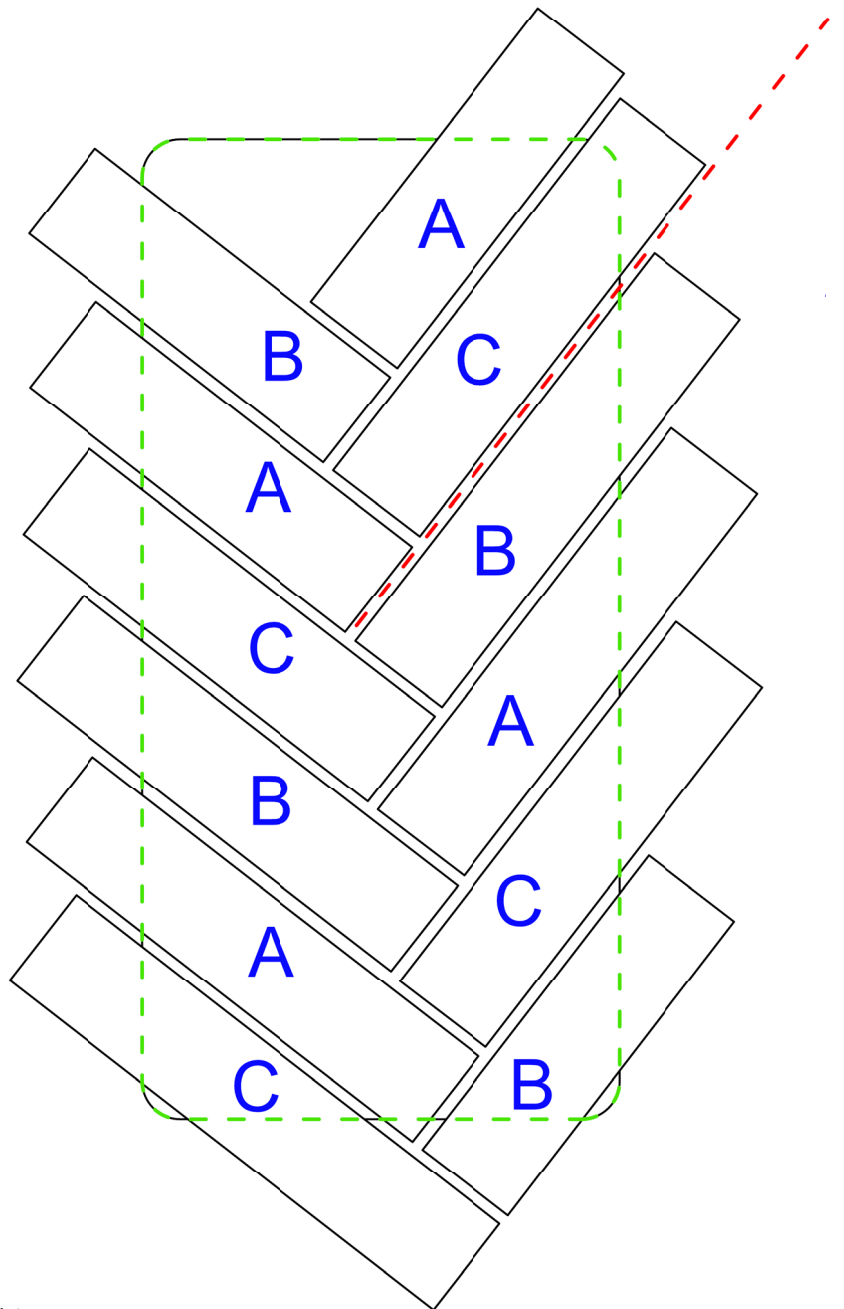

ABC Observe the order of application

--- tapes always should show the same distance (approx. 2 mm) and should be applied straight

||| apply overlapping tape around edges

*Have fun creating and enjoy!
Your Opitec Creative Team!*